



SimCoders.com

Reality Expansion Pack
for
JustFlight Piper Turbo Arrow III/IV

v4.8.11

May 24, 2025

Contents

AIRCRAFT GENERAL DESCRIPTION	5
INSTALLATION & CONFIGURATION	6
System requirements	6
Linux	6
Base Airplane	6
Install the software	6
Automatic Update of the Software	7
Manual Update of the software	7
Remove the software	7
Recommended sound settings	9
Recommended control settings	9
HARDWARE & SOFTWARE COMPATIBILITY	10
Headshake	10
Saitek Panels	10
XPRealistic	10
Differential and progressive brakes for X-Plane 11	10
USER INTERFACE	11
Lateral Menu	11
Maintenance Report	12
Kneeboard	13
Mass & Balance	15
Walkaround	16
Move the viewpoint while doing the walkaround in 2D	16
Walkaround in VR	16
Towing	16
Move the viewpoint while towing in 2D	17
Towing in VR	17
Engine Autostart	17
Settings Window	18
Lateral menu vertical offset	19
Use Advanced Steering	19
Use Advanced Braking	19
Use VR Walkaround and Towing	19
Wait for real weather at startup	20
In flight tips vertical offset	20
Economy System	21
Modes of Operation	21
Enabling the Economy System	21
FSEconomy: Aircraft Key Setup	21
How It Works	21
Maintenance and Repairs	24
Buying and Selling Fuel	26
Earning Money: Rewards	26

VR Support	27
How to open the plugin windows in VR	27
SOUNDS SYSTEM	28
PERSISTENT AIRCRAFT AND COMPONENTS WEARING	29
Reality Expansion Pack – Wear & Tear System	29
Loading a Worn-Out Aircraft	29
Checking Component Status	29
Hobbs Time and Tach Time	30
Hobbs Time	30
Tach Time	30
SYSTEMS DESCRIPTION	31
Powerplant	31
Engine Overview	31
Starter	32
Induction System	32
Fuel System	35
Spark Plugs	37
Exhaust System	37
Oil System	38
Propeller	40
The Red Box	40
Engine Monitor	40
Engine Startup Tips	41
Vacuum System	41
Electrical Systems & Avionics	42
Battery	42
Alternator	42
Lights	42
Electrical Gyros	42
Radio Stack	42
Landing Gear	43
System Limitations	43
Tires	43
Brakes	44
HUMAN FACTOR	45
Hypoxia	45
TUC & EPT	45
HOME COCKPITS/CUSTOM DATAREFS	47
RESOURCES & HOW-TOs	54
SUPPORT & CONTACTS	54
VERSION CHANGELOG	55



LICENCE	72
SOFTWARE PRODUCT LICENSE	72
LIMITED WARRANTY	73
LibCURL EULA	74
COPYRIGHT AND PERMISSION NOTICE	74



AIRCRAFT GENERAL DESCRIPTION

The PA-28 series competes with the high-winged Cessna 172 and the similarly low-winged Grumman American AA-5 series and Beechcraft Musketeer designs.

In 1967, Piper introduced the PA-28R-180 Cherokee Arrow. This aircraft was based on the previous Cherokee versions and featured a constant-speed propeller, retractable landing gear and was powered by a 180-horsepower (134-kW) Lycoming IO-360-B1E engine. A 200-hp (149-kW) version powered by a Lycoming IO-360-C1C was offered as an option beginning in 1969 and designated the PA-28R-200. The 180-hp model was dropped after 1971.

The Arrow II came out in 1972, featuring a five-inch fuselage stretch to increase legroom for the rear-seat passengers.

In 1977, Piper introduced the Arrow III (PA-28R-201), which featured a semi-tapered wing and longer stabilator to provide better low-speed handling. It also featured larger fuel tanks, increasing capacity from 50 to 77 gallons. Lately, Piper introduced the Turbo Arrow III powered by the Continental TSIO-360F. After a year, it introduced the Turbo Arrow IV with an improved TSIO-360-FB engine and the iconic T-Tail.

This is the version depicted by the Reality Expansion Pack.



INSTALLATION & CONFIGURATION

System requirements

This software requires X-Plane 11.00 or superior.

The minimum hardware requirements are the same of X-Plane:

- Dual Core, 2.5 GHz or faster
- 2 GB of RAM
- A video card with at least 500 MB of VRAM.

This software is designed to run on Windows, MacOS and Linux.

Linux

If you use REP on Linux, there are some additional requirements:

- libstdc++6
- libgcc6
- libcurl
- libssl
- libcrypto

On Steam: Right-click on X-Plane 12, select Properties, navigate to Compatibility, check the box for "Force the use of a specific Steam compatibility tool," and choose "Steam Linux Runtime 3.0 Sniper" or "Legacy Runtime 1.0" from the dropdown menu.

Base Airplane

In order to install this software, the **JustFlight Piper PA-28R-201 Turbo Arrow III/IV** must be installed on your system.

Install the software

Note: A video tutorial is available on [our YouTube Channel](#)

To install the software please follow this procedure.

1. Install the Turbo Arrow III/IV in your X-Plane.
2. Make sure the airplane is updated to its latest version before installing REP (you can check using the SkunkCrafts Updater plugin)
3. Clone the Turbo Arrow III/IV folder and call it "Turbo Arrow III/IV REP".
4. Extract the contents of this REP package into a temporary folder
5. Move **the contents** of "**into-aircraft-plugins-folder**" into the "**Turbo Arrow III/IV REP/plugins**" folder
6. Move **the contents** of "**into-aircraft-main-folder**" into the "**Turbo Arrow III/IV REP**" folder
7. Run X-Plane and load the Turbo Arrow III/IV.
8. Follow the onscreen instructions



Automatic Update of the Software

The Reality Expansion Pack support the automatic updates via the [SkunkCrafts Updater](#) plugin. In order to activate the automatic updates you shall:

1. Install the SkunCrafts Updater plugin as stated in its user manual
2. Inside REP's zip, inside the "into-aircraft-main-folder", you find a file called **skun-crafts_updater.cfg**. Copy such file into the Turbo Arrow III/IV main folder.

NOTE

- Always install REP's skunkcrafts_updater.cfg file even when the airplane already comes with its own cfg. REP updates will automatically install the base airplane updates whenever available.
- Load a non-REP airplane - such as the default Cessna 172 - before applying the automatic updates. Applying the updates on the aircraft that is currently loaded in the sim will not guarantee a successful update.
- After updating the plane, close and relaunch X-Plane to make sure that all the files are unloaded and updated correctly.

NOTE

The Turbo Arrow III/IV already comes with a skunkcrafts_updater.cfg file. You must replace that cfg with REP's one. By replacing it with REP's cfg, **you will still get the plane's updates as well as REP's**. Simcoders and the plane author will coordinate in order to provide updates via REP's skunkcrafts_updater.cfg.

Manual Update of the software

NOTE: It is not necessary to remove the older REP files. The software will take care of the update procedure.

1. Copy the "REP" folder contained in this package inside the "plugins" folder of the Turbo Arrow III/IV, overwriting the existing one.
2. Run X-Plane and load the Turbo Arrow III/IV.
3. Reload the aircraft when the automatic update is finished (click on Developer > Reload the Current Aircraft and Art).

Remove the software

To remove the software follow this procedure:

1. In the menu bar click on "Plugins"
2. Click on "SimCoders.com - REP" and choose "Disable Package"



3. Click "Ok" in the confirmation message
4. Reload the aircraft when the uninstallation procedure ends (click on Developer > Reload the Current Aircraft and Art).

At the end of the uninstallation procedure, the original aircraft will be restored to its mint conditions.

Recommended sound settings

To better enjoy the Reality Expansion Pack on the Turbo Arrow III/IV, you should setup your sound settings like the following screenshot.

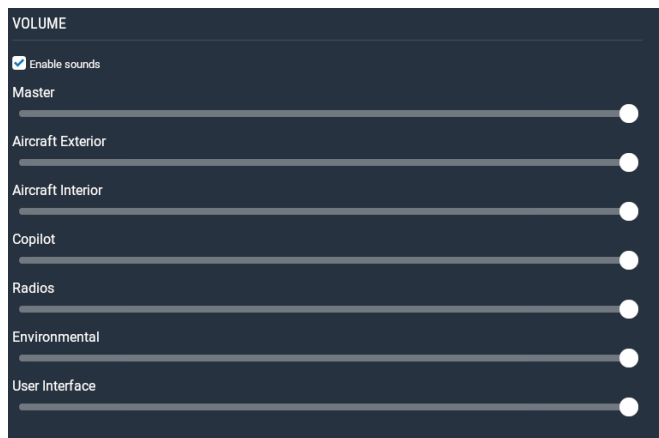


Figure 1: Recommended sound settings

For more information about the sounds, see the [Sounds System](#) chapter.

Recommended control settings

To have a better control over the airplane axis, you should setup your control sensitivity as follows.

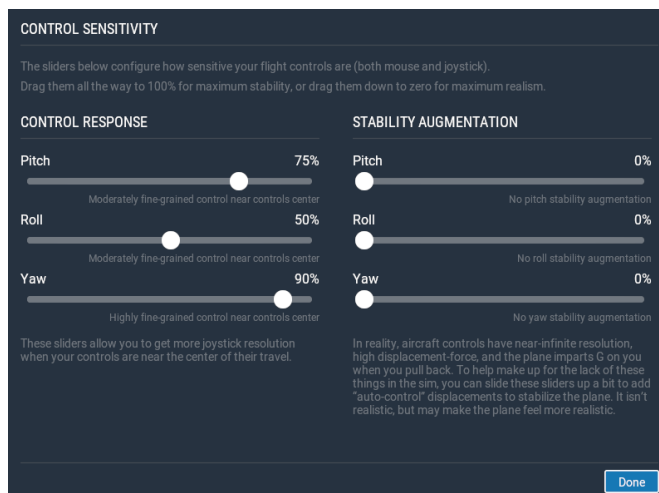


Figure 2: Recommended control settings



HARDWARE & SOFTWARE COMPATIBILITY

Headshake

If [HeadShake](#) v1.5 or higher is installed in your system, it will communicate with REP to improve the simulation realism.

REP will drive HeadShake to simulate the vibrations of the real engine. Using this, you will be able to run the engine at the most comfortable RPMs by simply checking the vibrations it produces.

In the same way, HeadShake will simulate the stall buffeting if the airplane in use shows that kind of behavior.

Saitek Panels

This software is compatible with Saitek Panels. In order to use them, you should install the [XSaitekPanels](#) free plugin from Sparker.

This package already includes a INI configuration file for XSaitekPanels. Make sure you copy it inside the main folder of your Turbo Arrow III/IV.

XPRealistic

The Reality Expansion Pack can be used together with XPRealistic.

You might need to disable XPRealistic's wind, touchdown and brakes sound effects as REP already provides them.

Differential and progressive brakes for X-Plane 11

The Reality Expansion Pack detects if [Differential and progressive brakes for X-Plane 11](#) is installed in your system.

If so, REP's differential braking algorithm is disabled in favor of the custom differential brakes algorithm of the third party plugin.

USER INTERFACE

Lateral Menu

When loaded, REP shows a lateral menu on the left-side of the screen. The menu consists of a set of small icons.

By default, the menu partially hides itself until the mouse pointer gets near it.



Figure 3: The menu is partially hidden by default



Figure 4: The menu is shown when the mouse pointer gets closer to it

You can choose to completely hide the menu when the mouse pointer leaves it. To do so, go to "Plugins -> SimCoders - REP -> Settings" menu and tick the "Show side menu on mouse over only" option.

The lateral menu entries are available in the "Plugins -> SimCoders - REP" menu as well.

Maintenance Report

This window is the primary way you have to check the status of your airplane and to fix all the systems that need the mechanic attention.

The report is divided on more pages. Each page relates to a different group of systems.

To act on a system, click on the entry in the "Action" column.

To switch to the previous/next page click over the flipped page corners at the bottom of the report.

Reality Expansion Pack - Maintenance Report

SC SimCoders.com
Aircraft Maintenance Division Maintenance Report Form

Model: Piper P28R-20IT Turbo Arrow IV No: 2844264 Time (hr): 2:44

ENGINE STATUS

Model: Teledyne Continental Motors TSIO-360-FB Time (hr): 203:26/1800

Item	Status	Action
Cylinders	OK	
Cyl. Compression (PSI)	80/80 80/80 80/80 80/80 80/80 80/80	
Oil Fluid	SAE 30, clean, 48 hrs before change	
Oil Fluid Quantity	3/4 USG (7/4 - 11/4)	Refill
Available Oil Types	SAE 30	Use
	SAE 50	Use
	SAE 10W30	Use
Oil Filter #1	Clean, 48 hrs bef. change	
Oil Pump #1	Ok	
Starter #1	Ok	
Propeller	Ok	
Electric Fuel Pump #1	Ok	
Fuel Filter #1	Clean	
Spark Plugs #1 Type	Massive (Fouling more)	Use Fine Wire
Plugs tip	Clean	
Vacuum Pump #1	OK	

The Economy System is not enabled.

Page 1/9

Figure 5: The Maintenance Report window

Kneeboard

The software come with a complete kneeboard window that contains the aircraft normal and emergency checklists together with the performance reference tables.

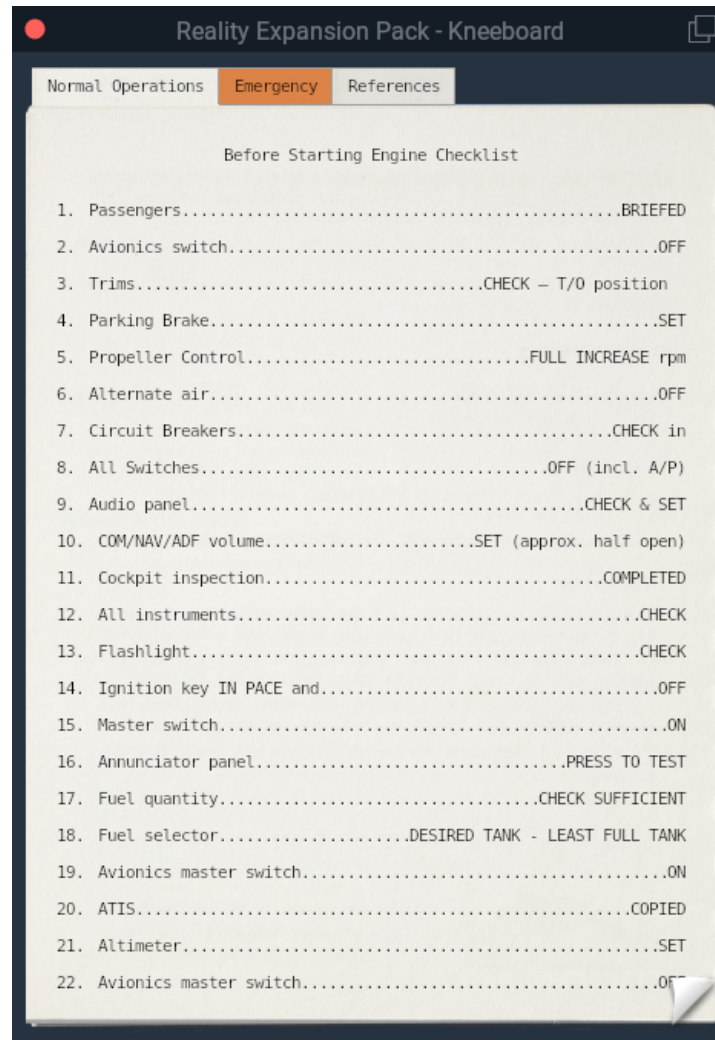


Figure 6: The Kneeboard window



Show the kneeboard using the plugins menu

The kneeboard window may be shown by clicking on the “Plugins” menu, then “SimCoders – REP” then “Show kneeboard”.

Manage the kneeboard using the custom commands

You can also use five different custom commands at which you can assign your custom keys or joystick buttons. The custom kneeboard commands defined by REP are the following:

Command	Description
simcoders/rep/kneeboard/toggle	Show or hide the kneeboard
simcoders/rep/kneeboard/next_section	Show the next kneeboard section
simcoders/rep/kneeboard/prev_section	Show the previous kneeboard section
simcoders/rep/kneeboard/next_page	Show the next kneeboard page
simcoders/rep/kneeboard/prev_page	Show the previous kneeboard page



Mass & Balance

The Turbo Arrow III/IV uses the author's mass and balance system as it provides all the necessary features that would be otherwise duplicated by REP. However, the lateral menu provides access to the Fuel Management Window. This window is meant to allow the user to buy and sell fuel at the correct currency change while using REP coupled to an **Economy System**.



Walkaround

Click on the Walkaround icon in the lateral menu to enter walkaround mode. Click again on the same icon on close the walkaround window to return in the cockpit.

During walkaround you can interact with some external systems of the aircraft using the walkaround window. Click the "Next" and "Prev" buttons at the bottom of the pre-flight checklists to move along the different pre-flight stations.

Always do the walkaround and the pre-flight inspection before each flight.

If you do not remove the tie-down and the chocks, you are not able to taxi and takeoff properly.

If you do not remove the pitot cover, you will incur an airspeed indicator failure.

Since version 3.4.5, it is possible to toggle all the static elements - such as the pitot cover and the tiedowns - using a single entry in the plugins menu or a keyboard command.

Since version 3.3, the following keyboard/joystick commands are available to control the walkaround mode.

Command	Description
simcoders/rep/walkaround/toggle	Toggle the walkaround mode
simcoders/rep/walkaround/next	Next walkaround station
simcoders/rep/walkaround/previous	Previous walkaround station
simcoders/rep/walkaround/action	Execute current action
simcoders/rep/walkaround/static_elements/toggle	Static elements toggle

Move the viewpoint while doing the walkaround in 2D

It is possible to move the viewpoint during towing by using the default camera commands of X-Plane. To pan the view using the mouse, keep pressed the **simcoders/rep/view/pan_with_mouse** command.

Walkaround in VR

REP provides a series of hotspots around the airplane useful to check the plane during the pre-flight, post-flight and lights-check checklists.

Start the walkaround using the **simcoders/rep/walkaround/toggle** command and then move from station to station using your VR controller. Make sure you bring the walkaround window with you while moving from a station to another.

Towing

REP comes with a complete towing simulation. To activate it, click on the towing icon in the lateral menu. Click the icon again to exit from the towing mode.

The towing features a 3D towing bar that will help you driving the airplane on the tarmac.

To move the airplane, push or pull the pitch axis of your joystick. Use the roll axis to turn.



Since REP simulate the force applied by a single man placed in front of the airplane, you may not be able to tow the airplane on the grass, just like in real life.

You won't be able to tow the airplane if it's tied-down or if chocks/brakes are applied.

Move the viewpoint while towing in 2D

It is possible to move the viewpoint during towing by using the default camera commands of X-Plane. To pan the view using the mouse, keep pressed the **simcoders/rep/view/pan_with_mouse** command.

Towing in VR

REP provides an hotspot in front of the airplane (tricycle gear) or close to the tail (taildragger) useful to drive the airplane in VR mode.

Toggle the towing mode using the **simcoders/rep/towing/toggle** command and then move the airplane using your joystick as described above.

Engine Autostart

The Reality Expansion Pack provides you a way to automatically start the engines.

Click on the engine autostart icon in the side menu and wait until the startup procedure is completed.

During the automatic start, REP shows a series of tips that describe the action being done.



Settings Window

The settings windows is shown by clicking over the "Plugins -> SimCoders - REP -> Settings" menu.

Enable the plane damages

When ticked, this option enable the plane damages.

Show generic messages

If ticked, REP will show generic messages related to systems status, when available.

Show failure messages

If ticked, REP will show a message in case of a system failure. The message will explain why the failure happened and what course of action should be taken.

Show tip messages

If ticked, REP will show a tip message. The message will give some hints related to the current pilot actions.

Show side menu on mouse hover only

When ticked, REP will completely hide the **lateral menu** when the mouse pointer leaves it.

Save and restore the plane status between sessions

If ticked, REP will save the airplane status when unloaded. When the same plane and livery are loaded again, the status will be restored.

The status includes all the switches position, the fuel on-board, the loaded weights, the engine fluids quantity and quality and all the possible values that play part to the systems simulation.

The engine temperatures - such CHT and Oil Temperature - are restored accordingly to the elapsed time since the values where stored.

The status files are backed up before being overwritten. You find the backup in the output/preferences/REP folder.

Save and restore the windows position between sessions

If checked, the Maintenance Hangar and the Keyboard windows positions are saved and restored between sessions.

Enable hypoxia effect

When ticked, the default hypoxia effect is replaced by REP's custom algorithm. See the **Hypoxia chapter** to get more information about the custom hypoxia effect.



Roll axis drives ground steering

When ticked, the joystick roll axis will steer the nosewheel on the ground.

Use US Customary

When ticked, REP will use the US Customary units of measure (pounds and inches).

Wind sound level

Control cabin the wind sound setting the level between 0 (mute) and 100 (full).

Lateral menu vertical offset

Control the vertical offset of the side menu. Change this number if REP's vertical menu position conflicts with other side menus.

Main Monitor Index

This option is visible only if X-Plane is running on two or more fullscreen monitors. Type the index of the monitor over which REP must show its menus and windows. The minimum number you can set here is 1. The maximum number is your monitors count. Each number addresses a different monitor.

Show engine monitor

When ticked, REP will show the engine's parameters when the power is above 30% and the engine settings - such as Manifold Pressure, Prop RPM or Mixture - are changed by the user.

Use Advanced Steering

Enable this option to use REP's advanced steering algorithm. You may need to disable this option if you have issues with steering with your hardware pedals.

Use Advanced Braking

Enable this option to smooth the brakes and to enable the automatic differential brakes. Instead of applying the brakes all at once, they will go from 0 to 1 in two seconds, smoothing the braking action. Automatic differential braking is applied if brakes are pressed while steering. Disable this option if you use hardware toepedals.

Use VR Walkaround and Towing

When enabled, this option allows to use the new VR walkaround and towing modes.



Wait for real weather at startup

When this options is enabled together with the simulator real weather, REP waits for the real weather to be correctly loaded before loading the plane status and update the systems' temperatures. This option is not needed in X-Plane 12 therefore it is not shown.

In flight tips vertical offset

Set the vertical offset of the in-flight window. By default, the tips are shown at the top of the main screen.



Economy System

The Reality Expansion Pack (REP) introduces a custom Economy System that rewards you for your flight time and allows you to manage maintenance and repair costs for your aircraft.

Modes of Operation

The Economy System offers three modes of operation:

- **Standalone:** Maintains a local bank account and maintenance records on your PC, shared among all your REP aircraft. Rewards are provided for flight time and landing skills.
- **FSEconomy:** Connects to your [FSEconomy](#) account, deducting maintenance costs directly from your FSEconomy balance. Flight time rewards are excluded, as they are handled by FSEconomy.
- **X-CPL-Pilot:** Integrates with your [X-CPL-Pilot](#) account to deduct maintenance costs. Flight rewards are not included, as they are managed by X-CPL-Pilot.

Enabling the Economy System

To activate the Economy System:

1. Open the [Maintenance Report](#) and navigate to the last page.
2. Click the “Enable” button for your chosen system.

FSEconomy: Aircraft Key Setup

If enabling the FSEconomy mode, an **Aircraft Key** is required. This key is a 15-character identifier unique to your aircraft within the FSEconomy environment.

Steps to find your Aircraft Key:

1. Log in to the [FSEconomy website](#).
2. Select the “**Aircraft**” button from the main menu.
3. Locate your aircraft in the list and click “**Edit**” under the “Action” column.
4. Generate or copy the Aircraft Key from the lower-left corner of the page.

When enabled, the Economy System saves your aircraft state to a separate file. This allows for two independent aircraft states—one for when the Economy System is active and another for when it is disabled. Switching between modes will load the corresponding state.

Your bank account is shared across all REP aircraft, enabling you to use funds earned with one aircraft to repair or maintain another.

How It Works

Once activated, the Economy System displays your bank account balance and transaction history (expenses for maintenance and fuel, and income from flights) in the [Maintenance Report](#).

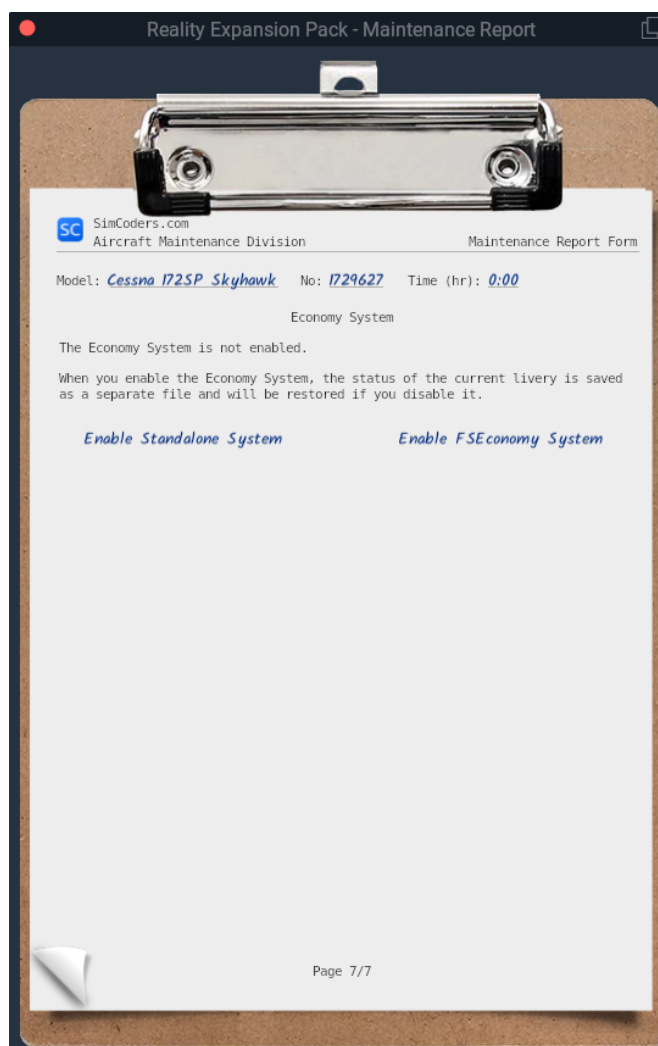


Figure 7: Enable the Economy System



Reality Expansion Pack - Maintenance Report

SC SimCoders.com
Aircraft Maintenance Division

Maintenance Report Form

Model: Cessna 172SP Skyhawk No: 1729055 Time (hr): 0:00

Economy System

This page will show your maintenance quotation once you select the fixes and changes to make to this aircraft. To add an item to the quotation, scroll to the previous pages and click over an "Action" cell that contains text.

Bank Account

Current balance: 8940.50\$

12 Dec 2018 16:35	Maintenance	-119.88\$
12 Dec 2018 16:32	Maintenance	-31.10\$
12 Dec 2018 16:13	Maintenance	-908.52\$

When you disable the Economy System, the status of the current livery is saved as a separate file and will be restored if you enable it again.

When you reset the Economy System, your career, the bank account and the airplane are reset.

[Disable the Economy System](#) [Reset the Economy System](#)

Page 7/7

Figure 8: Economy System Overview

Maintenance and Repairs

1. Navigate to the **Maintenance Report** to view available maintenance tasks.
2. For each task, the table lists the cost and required work time.

Reality Expansion Pack - Maintenance Report

SC SimCoders.com
Aircraft Maintenance Division

Maintenance Report Form

Model: Cessna 172SP Skyhawk No: 1729055 Time (hr): 0:00

ENGINE STATUS

Model: Lycoming IO-360-L2A Time (hr): 00:00/2000

Item	Status	Action	Price (\$)	Time
Cylinders	OK			
Cyl. Compression (PSI)	80/80 80/80 80/80 80/80			
Oil Fluid	SAE 30, clean, 50 hrs before change			
Oil Fluid Quantity	8/4 USG (5/4 - 8/4)			
Available Oil Types	SAE 20W50	Use	120	1:00 hr
	SAE 30	Use	120	1:00 hr
	SAE 50	Use	120	1:00 hr
Oil Filter #1	Clean, 100 hrs before change			
Oil Pump #1	Ok			
Electric Fuel Pump #1	Ok			
Fuel Filter #1	Clean			
Spark Plugs #1 Type	Fine Wire (More effective)	In Quote	290	20 mins
Plugs tip	Clean			
Starter #1	Ok			
Vacuum Pump #1	OK			

Bank Account (\$): 8940.50 View Quotation Quotation (\$): 290.00

Page 1/7

Figure 9: Maintenance Report Example

3. Add tasks to your **Quotation** by clicking the "Action" cell for each item. The cell will update to show "In Quote".
4. To remove a task, click the "Action" cell again.

Once you've selected the necessary actions, view your Quotation by clicking "View Quotation" or

scrolling to the last page of the **Maintenance Report**.

Reality Expansion Pack - Maintenance Report

SC SimCoders.com
Aircraft Maintenance Division Maintenance Report Form

Model: *Cessna 172SP Skyhawk* No: *1729055* Time (hr): *0:00*

Economy System

This is the quotation for the changes you want to make to your airplane.

Current balance: 8940.50\$

Item	Price (\$)	Time
<i>Change Spark Plugs #1</i>	<i>290.00</i>	<i>20 mins</i>
<i>Oil Change</i>	<i>120.00</i>	<i>1:00 hr</i>
Normal Price Totals	<i>410.00</i>	<i>1:20 hr</i>
Quick Fix Totals	<i>820.00</i>	<i>0 mins</i>

Decline *Accept Normal Price* *Accept Quick Fix*

Page 7/7

Figure 10: Quotation Example

The Quotation provides two pricing options:

- **Normal Price:** Maintenance is completed **one task at a time** in real-time, even if multiple aircraft require attention. The mechanic will continue working even if the simulator is closed.
- **Quick Fix Price:** All tasks are completed instantly at a higher cost.

Accept a price to proceed with maintenance, or decline to cancel the Quotation.



Buying and Selling Fuel

Standalone Mode Only

In the Weight and Balance window, you can add or remove fuel:

- **Adding Fuel:** Deducts money from your account based on local prices.
- **Removing Fuel:** Sells fuel back to the airport at a slightly lower rate than the purchase price.

Fuel prices vary by region, airport, and time, but can be customized via the `fuel_prices.cfg` file in the `Output/preferences/REP` directory of X-Plane. Note that custom prices are only applied after the next scheduled recalculation (every 4–8 days).

To check fuel prices at a specific airport, use the plugin menu: `SimCoders - REP -> Check fuel price at an airport`.

Earning Money: Rewards

Standalone Mode Only

Earn money for flight time, with bonus rewards for smooth landings. The softer the landing, the higher the bonus. Flight earnings are logged in your bank account transaction history at the end of each flight.



VR Support

REP supports the native VR implementation since version 3.4.0. VR support was further improved in version 4.5.0.

How to open the plugin windows in VR

REP provides a set of commands to control the plugin windows.

- **simcoders/rep/vr/open_menu**: open REP's main menu
- **simcoders/rep/fuelmenu/show**: show the fuel menu when using the economy system
- **simcoders/rep/maintenancereport/show**: show the maintenance report
- **simcoders/rep/settingsmenu/show**: show the settings menu
- **simcoders/rep/weightandbalance/show**: show the weight and balance (if supported)
- **simcoders/rep/towing/toggle**: toggle the tow mode
- **simcoders/rep/kneeboard/toggle**: toggle the kneeboard
- **simcoders/rep/walkaround/toggle**: toggle the walkaround mode

For more information about how to assign the commands above please read [X-Plane's user guide about assigning commands to buttons](#).

NOTE

Make sure you loaded a REP airplane before looking for the command in X-Plane's settings window.



Figure 11: The Tech Report shown in VR mode

SOUNDS SYSTEM

The Reality Expansion Pack features a custom sound system that provides immersive 3D sounds throughout the entire flight experience.

A custom sounds system has been preferred over the usage of FMOD for the following reasons:

- FMOD could be rather cumbersome from the developer's point of view, requiring more time to produce new features
- A custom engine is more flexible and can be expanded in no time providing new features
- A custom engine is more efficient as it's tailored to our needs

REP's sounds system provides advanced sounds such:

- Engine ignition
- Engine pings
- Engine exhaust effects
- Fuel pumps
- Electric Gyros
- Avionics effects
- Dynamic touch down
- Dynamic ground roll
- Dynamic wind



PERSISTENT AIRCRAFT AND COMPONENTS WEARING

Reality Expansion Pack – Wear & Tear System

The **Reality Expansion Pack** features a comprehensive **wear and tear system** that applies to the **entire aircraft**. Every component experiences wear over time, and after extended use, it may develop issues or even fail completely. The condition of each part is continuously saved and updated, even when the simulator is not running.

This applies to key aircraft systems such as engine components, the electrical system, airframe, and landing gear.

Each component is affected by both **time and user handling** in different ways.

For example, if you push the engine beyond its operational limits, it will degrade faster, leading to startup difficulties, combustion irregularities, and a noticeable loss of power. If neglected, it will eventually fail.

The precision of cockpit instruments also diminishes over time—a **newly calibrated gauge** will be far more accurate than one that has been in service for years.

Loading a Worn-Out Aircraft

With REP, you have the option to start with an aircraft that already has a **wear history**.

To do so, navigate to:

Plugins → **SimCoders.com - REP** → **Wear out to >**

and select one of the following presets:

- **Brand New:** A factory-fresh aircraft, just off the production line. The engine and all onboard systems are in perfect condition.
 - **Privately Owned (New):** A well-maintained aircraft with low flight hours. Some usage is logged, but no issues are present.
 - **Privately Owned (Old):** A privately owned aircraft with significant flight hours. While well cared for, wear is visible on various components.
 - **Flying Club:** A well-used aircraft that has passed through many hands—some careful, others less so. Expect worn-out systems and degraded instrument performance.
-

Checking Component Status

To inspect, repair, or calibrate individual components, refer to the **Maintenance Report**.

This report provides a **detailed overview** of all aircraft components that can be checked and serviced by a mechanic.



Hobbs Time and Tach Time

Within the **Maintenance Report**, you will also find:

- **Hobbs Time** – The total airframe time.
- **Tach Time** – The total engine time.

After flying a new aircraft for a while, you may notice a **slight difference** between these two values due to how they are calculated.

Hobbs Time

In most aircraft, the **Hobbs meter** is triggered by an oil pressure switch, meaning it starts counting when the engine is running and stops when the engine shuts down.

It measures time in **real-world clock intervals**, ticking off **0.1 hours** every **6 minutes**, regardless of whether the aircraft is idling or in cruise flight.

Tach Time

Unlike Hobbs time, the **tachometer clock** does not track actual time; instead, it records **engine revolutions**.

- When the engine runs at **cruise RPM**, the tachometer records time at the same rate as the Hobbs meter.
- If the engine operates at a lower RPM (e.g., idling on the ramp), the tach time accumulates **more slowly** than Hobbs time.
- This means that **the faster you run the engine, the faster the tach time increases**.

By understanding and managing wear and tear, you can extend the life of your aircraft's components and maintain peak performance throughout your flights.



SYSTEMS DESCRIPTION

Within the Reality Expansion Pack, each system has its own life-cycle and can be damaged depending on many factors, including the pilot's behavior.

All systems can be fixed individually using the Maintenance Report or all at once using the **simcoders/rep/systems/fix_all** command.

The following is a brief description of each system onboard.

Powerplant

The Turbo Arrow III/IV is powered by a Continental TSIO-360-FB turbosupercharged, direct-drive, air-cooled, horizontally-opposed, fuel-injected engine with 360 cubic inches displacement.

This engine outputs a maximum power of 200HP at 41 inHg of manifold pressure and 2575RPM with no time limitations.

Engine Overview

The Reality Expansion Pack totally replaces the engine simulated by X-Plane with custom algorithms to the point that not a single bit of the old engine model is left in the sim.

Everything in the engine is made from scratch to provide the maximum realism. This includes the combustion model to which all the other models - such as the Power Output, the Cylinders Head Temperature or the Oil Pressure - depend.

The engine now breathes air, mix it with fuel and produce a realistic combustion.

Some of the features include:

- **Correct animations and sounds:** the cylinders compression is simulated to the deepest level, enhancing the propeller movements at very low RPMs and at startup and shutdown
- **Correct power output:** the engine outputs the correct power at every MAP/RPM setting.
- **Correct fuel flow:** reaching the correct power output allows X-Plane to provide the right fuel flow at every phase of the flight, right down to the numbers.
- **Realistic startup procedure:** The engine needs to be primed and prepared for startup following the correct procedure
- **Realistic engine issues:**
 - The oil type, quality and quantity affects the engine behavior.
 - The spark plugs may foul because of carbon deposits
 - Leaning the mixture at the wrong time or in the wrong way may cause damages to the engine
 - Realistic wastegate operations: the turbocharger's wastegate is automatic operated by a mechanical controller that keeps the MAP constant while the airplane climbs or descends.
 - Engine preheater and winterization kit: the engine may be preheated in winter using the provided electric engine heater. If the engine is not heated correctly, it won't start or may be damaged after start.



Starter

The Reality Expansion Pack replaces the default starter with a custom one.

In the “Engine Status” page of the Maintenance Report you can:

- Check the starter status
- Replace a faulty starter with a new one

CAUTION

The starter will overheat and then damage if engaged for too long. Make sure to engage the starter for no more than 30 seconds. Let it cool down between failed starts.

Induction System

The Reality Expansion Pack (REP) implements a custom Manifold Absolute Pressure (MAP) algorithm, replacing X-Plane’s default system for enhanced accuracy and realism.

The **Turbo Arrow III/IV** comes equipped with a **naturally aspirated Continental IO-550-B** engine, meaning its performance is directly affected by altitude. As the aircraft climbs, the available air density decreases, leading to a reduction in **manifold pressure**, power output, and overall efficiency.

With the **Reality Expansion Pack (REP)**, this engine can be **upgraded to a turbo-normalized (TN) configuration** via the **Maintenance Report** window. This modification allows the engine to maintain **sea-level manifold pressure** even at higher altitudes, significantly improving cruise performance and climb efficiency.

Unlike a traditional turbocharged engine, which can generate manifold pressures exceeding standard atmospheric conditions, a **turbo-normalized system** is designed to regulate pressure, ensuring the engine operates within its intended limits while maximizing power retention at altitude. To achieve this, the aircraft is fitted with a **turbocharger and an automatic wastegate**, which carefully manages boost pressure to prevent overboosting and excessive engine stress.

With this upgrade, the **Turbo Arrow III/IV** becomes a more capable aircraft, well-suited for **high-altitude operations, improved fuel efficiency, and enhanced climb rates**, making it ideal for flights over mountainous terrain or extended cross-country journeys.

Turbo-supercharger

It consists in a small turbine powered by the engine’s exhaust gas. The gas spins the turbine that sucks in fresh air from the other side and compress it, pushing it inside the engine.

This allow the engine to maintain its power at high altitude. The Continental TSIO-360-FB can provide 200HP up to 14.000 feet.



Fixed Wastegate

The included turbocharger features by default a fixed waste-gate. That is, the manifold pressure must be always regulated manually. In case the Manifold Pressure exceeds 41 inches of Manifold Pressure, the “Boost” lamp goes off in the cockpit. That means the maximum turbo boost has been exceeded and damage could occur to the engine.

A pressure release valve is meant to protect the engine from excessive overboost, but its action may be slow, especially when the engine oil is cold and thick.

Automatic Wastegate

Properly controlling the fixed wastegate is not easy and may lead to engine inefficiencies or worse, damages. That is why some third-parties manufacturers developed an automatic wastegate controller.

The automatic controller moves the wastegate to set the manifold pressure selected by the pilot using the throttle. When the throttle is fully closed, the target manifold pressure is ~8 inHg. When the throttle is fully open, the target manifold pressure is 41 inHg.

Slamming the throttle to the firewall will still lead to overboost, because the wastegate controller is not that fast. Some precaution is still needed and the best way to prevent an overboost is to slowly advance the throttle when adding power.

The automatic wastegate improves the backpressure dynamics, especially at altitude, and provides ~5% of power increase for the same throttle setting.

It is possible to switch from the fixed to the automatic wastegate using the [maintenance report](#).

System Limitations

1. Maximum MAP: 41 InHg



Because the engine is turbocharged, some of its characteristics are different from a normally aspirated engine.

The compressor has the capability of producing manifold pressures in excess of the 5 minute takeoff maximum of 36.5 inches Hg. In order not to exceed 36.5 inches of manifold pressure, a waste gate is used so that some of the exhaust will bypass the turbine and be vented into the tailpipe.

Anything that affects the flow of induction air into the compressor or the flow of exhaust gases into the turbine will increase or decrease the speed of the turbo-charger. This resultant change in flow will have no effect on the engine if the waste gate is still open because the waste gate position is changed to hold compressor discharge pressure constant. A waste gate controller automatically maintains maximum allowable compressor discharge pressure any time the turbine and compressor are capable of producing that pressure.

At high altitude, part throttle, or low RPM, the exhaust flow is not capable of turning the turbine and compressor fast enough to maintain maximum compressor discharge pressure, and the waste gate will close to force all of the exhaust flow through the turbine.

When the waste gate is fully closed, any change in turbocharger speed will mean a change in engine operation. Thus, any increase or decrease in turbine speed will cause an increase or decrease in manifold pressure and fuel flow. If turbine speed increases, the manifold pressure increases; if the turbine speed decreases, the manifold pressure decreases. Since the compression ratio approaches 3 to 1 at high altitude, any change in exhaust flow to the turbine or ram induction air pressure will be magnified proportionally by the compression ratio and the change in flow through the exhaust system.

Manifold Pressure variation with Engine RPM

When the waste gate is open, the supercharged engine will react the same as a normally aspirated engine when the engine RPM is varied. That is, when the RPM is increased, the manifold pressure will decrease slightly. When the engine RPM is decreased, the manifold pressure will increase slightly.

However, when the waste gate is closed, manifold pressure variation with engine RPM is just the opposite of the normally aspirated engine. An increase in engine RPM will result in an increase in manifold pressure, and a decrease in engine RPM will result in a decrease in manifold pressure.

Manifold Pressure variation with Altitude

At full throttle, the turbocharger has the capability of maintaining the maximum continuous manifold pressure of 35 inches Hg to well above 17,000 feet depending on engine and atmospheric conditions. However, engine operating limitations establish the maximum manifold pressure that may be used. Manifold pressure should be reduced above 17,000 feet, as noted on the operating placard in the airplane (subtract 1 inch Hg from 35 inches for each 1000 feet above 17,000 feet).

At part throttle, the turbocharger is capable of maintaining cruise climb power of 2500 RPM and 30 inches Hg from sea level to 20,000 feet in standard temperatures, and from sea level to 8000 feet under hot day conditions without changing the throttle position, once the power setting is established after takeoff. Under hot day conditions, this climb power setting is maintained above



8000 feet by advancing the throttle as necessary to maintain 30 inches of manifold pressure in the same manner as a normally aspirated engine during climb.

Manifold Pressure variation with Airspeed

When the waste gate is closed, manifold pressure will vary with variations in airspeed. This is because the compressor side of the turbo charger operates at pressure ratios of up to 3 to 1 and any change in pressure at the compressor inlet is magnified at the compressor outlet with a resulting effect on the exhaust flow and turbine side of the turbo charger.

Fuelflow variations with changes in Manifold Pressure

The engine-driven fuel pump output is regulated by engine speed and compressor discharge pressure. Engine fuel flow is regulated by fuel pump output and the metering effects of the throttle and mixture control. When the waste gate is open, fuel flow will vary directly with manifold pressure, engine speed, mixture, or throttle control position. In this case, manifold pressure is controlled by throttle position and the waste gate controller, while fuel flow varies with throttle movement and manifold pressure.

When the waste gate is closed and manifold pressure changes are due to turbocharger output, as discussed previously, fuel flow will follow manifold pressure even though the throttle position is unchanged. This means that fuel flow adjustments required of the pilot are minimized to (1) small initial adjustments on takeoff or climb-out for the proper rich climb setting, (2) lean-out in cruise, and (3) return to full rich position for approach and landing.

Manifold Pressure variation with increasing or decreasing Fuel Flow

When the waste gate is open, movement of the mixture control has little or no effect on the manifold pressure of the turbocharged engine.

When the waste gate is closed, any change in fuel flow to the engine will have a corresponding change in manifold pressure. That is, increasing the fuel flow will increase the manifold pressure and decreasing the fuel flow will decrease the manifold pressure. This is because an increased fuel flow to the engine increases the mass flow of the exhaust. This turns the turbocharger faster, increasing the induction air flow and raising the manifold pressure.

Fuel System

Fuel Pump

The fuel system is provided with a primer and an electrical fuel pump that can be used to prime the engine.

The fuel pump should not be used in flight unless required by the checklists.

In the "Engine Status" page of the Maintenance Report you can:

- Check the fuel pump **status**
- **Repair** the pump in case of failure



CAUTION

Engaging the fuel pump during flight will cause an increase of the fuel flow. That is, the EGT will raise or drop depending on your current mixture settings.

Be sure to reset the mixture setting when the fuel pump switch is being turned on or off.

Vapor Locks

A vapor lock is a fuel vapor bubble in the fuel lines that prevents cool fuel to reach the combustion chambers.

If the engine was shut down in the last 10-15 minutes and should be restarted, a vapor lock is in place if the engine starts up for a moment and then dies.

To clear the vapor lock, close the mixture and switch on the electrical fuel pump for at least 30 seconds to up to one minute. Then repeat the startup procedure.

The fuel pump will recirculate the fuel in the continuous flow fuel system, dumping the fuel vapor inside the fuel tanks.

Fuel Injection System

The Reality Expansion Pack fully recreates the TCM Continuous Flow Fuel Injection System that powers the real world Turbo Arrow III/IV.

This fuel injection system is as simple as it can be. That is, the throttle position controls the amount of fuel that goes into the engine. It does not compensate for altitude but it does compensate for MAP.

Tuned Fuel Injectors

The cylinders and air induction positions lead to a different amount of air being sucked in each cylinder for a given throttle position.

That is, more air goes into the #1 and #2 cylinders than in #3 and #4. In a 6 cylinders engine, the spread between #1 and #6 is quite wide.

Factory fuel injectors deliver the same amount of fuel to each cylinder. That is, cylinder #1 runs leaner than #2. The richer cylinder is usually #5 or #6.

This spread affects the engine performance, especially when running lean of peak with only one EGT probe. Usually, leaning LOP for the hottest cylinder (#5 or #6 in a 6 cylinders, #3 or #4 in a 4 cylinders) means being widely LOP for the #1 cylinder, thus experiencing a loss of power together with a rough running engine.

In the [Maintenance Report](#), it is possible to replace the factory injectors with tuned ones, made to properly release the correct amount of fuel based on the cylinder number. Tuned injectors allow for:



- Smoother LOP operations
- Fewer vibrations
- **Lower fuel burn of about 1 GPH**

General Aviation Modifications, Inc. is a real world manufacturer of tuned fuel injectors for many different type of fuel injected engines. For more information, please visit [GAMI's website](#).

Spark Plugs

Each cylinder is provided with two spark plugs, one connected to the left magneto and the other connected to the right magneto.

Carbon deposits form on the spark plugs pointers if the engine is run at low RPMs with rich mixture. That is, the spark plugs foul.

To avoid fouling, always keep at least 1000RPM and aggressively lean the mixture when on ground.

A big drop in RPM during the magnetos check is a sign of a fouled spark plug.

To clean the spark plugs, set a high power setting and aggressively lean the mixture. Run the engine with this setting for about 20 seconds then recheck the magnetos.

In the "Engine Status" page of the Maintenance Report you can:

- Check the spark plugs status
- Manually clean the spark plugs
- Change the default spark plugs with the "fine wire" type.

Fine wire spark plugs are less prone to fouling but not immune to it.

Exhaust System

The main goal of the Exhaust System is to emptying each cylinder of spent exhaust gases.

Factory exhaust usually aren't length-tuned. That is, the length from the cylinder's outlet valve to the end of the exhaust is not the same for each exhaust tube. This causes the formation of shock waves when the exhaust gases from one cylinder hit those from another cylinder. That is, the emptying effect is lower than desired.

Using the **Maintenance Report** it is possible to replace the factory exhaust with tuned ones. Tuned exhaust allow for:

- ~10% more power
- Fewer vibrations
- Lower fuel burn
- Lower CHTs



Oil System

The oil system has the main role to lubricate the engine thus reducing the friction between engine components. It also helps reduce the engine temperature.

The oil system is made by:

- An **oil tank**
- A **screening filter**
- A set of **oil lines** that go to the cylinders
- An engine-driven **scavenging pump** that moves the oil from the bottom of the oil sump - below the engine - back to the oil tank
- An **oil radiator**.

The Reality Expansion Pack simulates all these components as well as the oil fluid properties.

The pilot must check the quantity and quality of the oil before each flight. This should be done during the walkaround.

In the "Engine Status" page of the Maintenance Report you can:

- Check the **type of oil fluid** in use
- Check the **quantity of oil fluid** in the oil tank
- **Change the oil** fluid type
- Check the **status of the oil filter**
- **Change the oil filter** with a new one
- Check the **oil pump status**
- Overhaul the **oil pump**

A higher grade oil - such SAE50 - is thicker than a lower grade - such SAE30 - and meant to be used in hotter climates.

The following article is a guide to choose the correct oil grade depending on the type of flight operations in progress: <https://www.simcoders.com/2016/04/18/how-to-choose-right-oil-engine>

If the oil is not changed regularly (about every 40 hours) it may get dirty and have a lower lubricant action. That is, the engine will run hotter and wear more than before.

NOTE

The oil pressure may get closer to its maximum value when a cold engine is first started. This is normal and do not cause any harm to the engine as long as the oil pressure gets lower during engine warmup.

Warmup the engine to ensure the correct oil temperature and pressure before applying full power for takeoff.

CAUTION



Using a higher grade oil in cold climates could lead to high oil pressure, thus damaging the oil system components.

Propeller

The Reality Expansion Pack replaces the default propeller governor with a custom one.

The propeller governor controls the propeller blades pitch in order to maintain a constant propeller speed.

The governor drives the blades pitch using the engine oil pressure. Make sure to properly warm up the engine before takeoff to ensure a faster response of the governor.

During the engine run up, three prop governor cycles will ensure a better oil recirculation inside the propeller governor oil circuit.

The Red Box

When the IO-360 was firstly designed, there were many misconceptions about how to actually manage the engine throughout the normal operating range.

The most common tip was to run 100°F ROP during high power operations, such climb, and 50°ROP during cruise, with the extra rule to almost never run LOP.

When engine monitors started to be normal equipment on most high-end GA aircrafts, pilots finally had some data on which they could base they engine management decisions.

It turned out that the 50/100°ROP rule is – generally speaking – not the best way to take care of your engine.

In fact, the best ranges turned out to be the following:

- Above 80% of power: richer than 200°F ROP or leaner than 60°F LOP
- Between 75% and 80% of power: richer than 180°F ROP or leaner than 40°F LOP
- Between 70% and 75% of power: richer than 125°F ROP or leaner than 25°F LOP
- Between 65% and 70% of power: richer than 100°F ROP or leaner than peak EGT
- Below 65% of power: no restrictions, lean as you like

The ranges outside the one suggested above form what is called the 'red box'.

Running the engine in the red box is not really damaging it, but if you take care of it and stay away from the red box, you may extend the engine life and get an engine that run smoother.

An extensive explanation of how and why you should keep the red box rule in mind is in this article: https://www.avweb.com/news/savvyaviator/savvy_aviator_59_egt_cht_and_leaning-198162-1.html

Engine Monitor

The Reality Expansion Pack provides an engine monitor that shows the engine parameters such as the Fuel Flow, the EGT and the BHP whenever the engine control levers are moved.

To activate the engine monitor, open the plugin settings and check the "Show Engine Monitor" option.



Engine Startup Tips

- Before starting the engine, always apply full mixture and full throttle and then prime the engine using the primer button. Keep the primer button pressed for as long as required by the priming table provided in the checklists. After this priming phase, close the throttle and proceed with the normal engine startup.
- If the engine “pops” during the startup it means it’s flooded. Just close the mixture and set the throttle full open, then engage the starter. The engine should start in a few revolutions. If not, repeat the normal startup procedure.

Vacuum System

The engine is provided with a vacuum pump used to power up the vacuum gyros.

A vacuum pump is connected to the engine via a quick-break shaft. In case of vacuum pump seizure, the shaft breaks and no harm is done to the engine.

Use the vacuum gauge to check that the vacuum pump is properly working. A normal vacuum reading is about 4 to 6 when the engine is running at cruise power.

In the “Engine Status” page of the Maintenance Report you can:

- Check the vacuum pump status
- Repair a broken vacuum pump



Electrical Systems & Avionics

The airplane is equipped with a 28-volt, direct-current electrical system.

The system uses a battery as the source of electrical energy. An alternator maintains its state of charge.

Battery

The default battery is replaced with a battery that keeps its charge between sim sessions and discharges at a realistic rate. The battery state is updated even when the simulator is not running. This means that if you leave your battery on, it will discharge even if X-Plane is closed.

In the "Electrical System & Avionics Status" page of the Maintenance Report you can:

- Check the battery **charge**
- **Recharge** the battery
- **Disconnect** the battery poles from the electrical system

If you plan not to fly the airplane for a while, you should disconnect the battery via the Maintenance Window. This will avoid self-discharging and extend the battery life during storage.

Alternator

The alternator switch position is saved through all X-Plane sessions. Make sure it is switched in the correct position according to the checklists throughout the entire flight.

The alternator switch operation may affect the avionics. Check the Avionics paragraph below to get more information.

Lights

The light switch positions are saved through all X-Plane sessions.

If the airplane is not provided with strobe lights fmod sounds, the Reality Expansion Pack adds the strobe lights sounds when the lights are switched on.

Electrical Gyros

The Reality Expansion Pack replaces the default X-Plane electrical gyros with custom ones with a more realistic spin up/down dynamics.

The typical spin up/down sounds are reproduced when the battery switch is turned in the "On" position. The instruments provided with an electrical gyro and therefore depending on the electrical supply are the turn/slip indicator, the standby attitude indicator and the HSI, if they are provided.

Radio Stack

The radio components save their own state - such as frequencies and knobs position - during X-Plane sessions.



In the “Electrical System & Avionics Status” page of the Maintenance Report you can:

- Check the **status** of each radio
- **Fix** a faulty radio

CAUTION

Never turn on or off the engine or the alternator when the avionics switch is in the “On” position. Doing so may trigger a overvoltage spike that could damage one or more avionics components.

The newer avionics such as the Garmin GNS430/530 are better protected from overloads but they are not totally immune from them.

Landing Gear

The airplane is equipped with a tricycle, hydraulically actuated, retractable landing gear. When in good shape, the landing gear requires from 6 to 8 seconds to fully extend or retract.

The Reality Expansion Pack introduces the following changes to the default landing gear:

- **Improved ground roll physics:** REP corrects the default behavior of X-Plane on ground in cross wind conditions, when the airplane tended to steer against the wind.
- **Custom touchdown sounds:** The touchdown sounds tone and volume are related to the touchdown speed. A harder touchdown will produce different sounds than a soft landing.
- **Brakes sounds:** Actuating the brakes produces the typical whining sound. Also the classic squeaking sounds are reproduced when the brakes are not in perfect shape.

In the “Landing Gear & Brakes Status” page of the Maintenance Report you can:

- Check the **status** of the landing gear struts
- **Fix** a faulty strut

System Limitations

Tires

The Reality Expansion Pack simulates the tire status and failure based on the landings done in the past.

A flat tire can cause the plane to yaw during the landing run or get it stuck on the ground before taxi.

In the “Landing Gear & Brakes Status” page of the Maintenance Report you can:

- Check the **status** of each tire
- **Fix** a faulty tire



Brakes

The Turbo Arrow III/IV has a single-disc, hydraulically-actuated brake on each main landing gear wheel. Each brake is hydraulically connected to a cylinder attached to each of the pilot's rudder pedals.

The brakes are operated by applying pressure to the top of the rudder pedals, which are interconnected. When the airplane is parked the brakes may be activated using the parking brake switch located under the pilot's yoke.

To avoid brake failures, keep the brake system properly maintained and minimize brake usage during taxi operations and landings.

Do not apply the brakes for a long time. If the runway is long, let the plane slow down by itself.

In the "Landing Gear & Brakes Status" page of the Maintenance Report you can:

- Check the **status** of the braking system
- **Fix** a faulty brake



HUMAN FACTOR

Hypoxia

Hypoxia is a condition in which the body or a region of the body is deprived of adequate oxygen supply at the tissue level.

As altitude is gained, the partial pressure of Oxygen gets lower and lower to the point that the human body is unable to absorb enough quantity of it to sustain life.

The symptoms of hypoxia are:

- Apparent personality change
- Impaired judgement
- Headache
- Tingling
- Increased rate of breathing
- Muscular impairment
- Memory impairment
- Visual sensory loss
- Tunnel vision
- Impairment of consciousness
- Cyanosis
- Unconsciousness
- Death

The Reality Expansion Pack simulates some of the symptoms above, such as the tunnel vision, the increased rate of breathing and the muscular impairment.

TUC & EPT

Time of Useful Consciousness (TUC) is the time available for the development of hypoxia and the pilot to do something about it. It is not the time to unconsciousness but the short time from a reduction in adequate oxygen until a specific degree of impairment, generally taken to be the point when the individual can no longer take steps to help him/herself.

Effective Performance Time (EPT) is always within and shorter than TUC. Its quantification however depends on the individual.



The following is a table that represent the EPT simulated by REP.

Altitude (ft)	EPT
10000	Few hours
15000	40 minutes
20000	10 minutes
30000	30 seconds
40000	15 seconds
45000	1-2 seconds



Figure 12: Hypoxia effect



HOME COCKPITS/CUSTOM DATAREFS

In order to work properly, REP uses a set of custom datarefs instead of default X-Plane ones.

Here you find a list of datarefs that you can use for your home cockpit.

This list includes all REP's datarefs. Some of them might not be present on some REP, depending on the systems depicted by the package.

Dataref: simcoders/rep/stallwarning/on

- Type: int
- Writable: No
- Contents: 0 = off, 1 = on

Dataref: simcoders/rep/stallwarning/level

- Type: int
- Writable: No
- Contents: 1 = low, 2 = high

Dataref: simcoders/rep/cockpit2/gauges/indicators/vacuum

- Type: float
- Writable: No
- Contents: Vacuum gauge value

Dataref: simcoders/rep/cockpit2/gauges/indicators/attitude_indicator_0_pitch

- Type: float
- Writable: No
- Contents: Main attitude indicator pitch

Dataref: simcoders/rep/cockpit2/gauges/indicators/attitude_indicator_0_roll

- Type: float
- Writable: No
- Contents: Main attitude indicator roll

Dataref: simcoders/rep/cockpit2/gauges/indicators/attitude_indicator_1_pitch

- Type: float
- Writable: No



- Contents: Stdby attitude indicator pitch
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/attitude_indicator_1_roll

- Type: float
 - Writable: No
 - Contents: Stdby attitude indicator roll
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/airspeed_kts_pilot

- Type: float
 - Writable: No
 - Contents: Pilot airspeed
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/airspeed_kts_copilot

- Type: float
 - Writable: No
 - Contents: Copilot airspeed
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/altitude_ft_pilot

- Type: float
 - Writable: No
 - Contents: Pilot altitude
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/altitude_ft_copilot

- Type: float
 - Writable: No
 - Contents: Copilot altitude
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/vvi_fpm_pilot

- Type: float
 - Writable: No
 - Contents: Pilot VSI
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/vvi_fpm_copilot

- Type: float
-



- Writable: No
 - Contents: Copilot VSI
-

Dateref: simcoders/rep/cockpit2/switches/avionics_power_on

- Type: int
 - Writable: Yes
 - Contents: Avionics switch
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_0

- Type: float
 - Writable: No
 - Contents: Fuel kg in tank 0
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_ratio_0

- Type: float (ratio 0..1)
 - Writable: No
 - Contents: Fuel ratio in tank 0
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_1

- Type: float
 - Writable: No
 - Contents: Fuel kg in tank 1
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_ratio_1

- Type: float (ratio 0..1)
 - Writable: No
 - Contents: Fuel ratio in tank 1
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_2

- Type: float
 - Writable: No
 - Contents: Fuel kg in tank 2
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_ratio_2



- Type: float (ratio 0..1)
 - Writable: No
 - Contents: Fuel ratio in tank 2
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_3

- Type: float
 - Writable: No
 - Contents: Fuel kg in tank 3
-

Dateref: simcoders/rep/indicators/fuel/fuel_quantity_ratio_3

- Type: float (ratio 0..1)
 - Writable: No
 - Contents: Fuel ratio in tank 3
-

Dateref: simcoders/rep/engine/fuelline/electrical_feed_0/switch_on

- Type: int
 - Writable: Yes
 - Contents: L tip pump switch (1 = on)
-

Dateref: simcoders/rep/engine/fuelline/electrical_feed_1/switch_on

- Type: int
 - Writable: Yes
 - Contents: R tip pump switch (1 = on)
-

Dateref: simcoders/rep/indicators/fuel/fuel_flow_0

- Type: float
 - Writable: No
 - Contents: L FF indicator
-

Dateref: simcoders/rep/indicators/fuel/fuel_flow_1

- Type: float
 - Writable: No
 - Contents: R FF indicator
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/engine_0_rpm



- Type: float
 - Writable: No
 - Contents: L RPM indicator
-

Dateref: simcoders/rep/cockpit2/gauges/indicators/engine_1_rpm

- Type: float
 - Writable: No
 - Contents: R RPM indicator
-

Dateref: simcoders/rep/cockpit2/engine/actuators/fuel_pump_0

- Type: int
 - Writable: Yes
 - Contents: L pump (0 = off, 1 = on)
-

Dateref: simcoders/rep/cockpit2/engine/actuators/fuel_pump_1

- Type: int
 - Writable: Yes
 - Contents: R pump (0 = off, 1 = on)
-

Dateref: simcoders/rep/cockpit2/engine/actuators/low_fuel_pump_0

- Type: int
 - Writable: Yes
 - Contents: L LO speed pump
-

Dateref: simcoders/rep/cockpit2/engine/actuators/low_fuel_pump_1

- Type: int
 - Writable: Yes
 - Contents: R LO speed pump
-

Dateref: simcoders/rep/cockpit2/engine/actuators/high_fuel_pump_0

- Type: int
 - Writable: Yes
 - Contents: L HI speed pump
-

Dateref: simcoders/rep/cockpit2/engine/actuators/high_fuel_pump_1



- Type: int
 - Writable: Yes
 - Contents: R HI speed pump
-

Dateref: simcoders/rep/engine/electrical_fuelump/switch_on_0

- Type: int
 - Writable: Yes
 - Contents: L pump (0 off, 1 LO, 2 HI)
-

Dateref: simcoders/rep/engine/electrical_fuelump/switch_on_1

- Type: int
 - Writable: Yes
 - Contents: R pump (0 off, 1 LO, 2 HI)
-

Dateref: simcoders/rep/engine/cowl/handle_ratio_0

- Type: float (ratio 0..1)
 - Writable: Yes
 - Contents: L cowl flaps handle
-

Dateref: simcoders/rep/engine/cowl/handle_ratio_1

- Type: float (ratio 0..1)
 - Writable: Yes
 - Contents: R cowl flaps handle
-

Dateref: simcoders/rep/engine/oil/temp_f_0

- Type: float
 - Writable: No
 - Contents: L oil temp (F)
-

Dateref: simcoders/rep/engine/oil/temp_f_1

- Type: float
 - Writable: No
 - Contents: R oil temp (F)
-

Dateref: simcoders/rep/engine/oil/temp_c_0



- Type: float
 - Writable: No
 - Contents: L oil temp (C)
-

Dataref: simcoders/rep/engine/oil/temp_c_1

- Type: float
 - Writable: No
 - Contents: R oil temp (C)
-

Dataref: simcoders/rep/engine/oil/press_psi_0

- Type: float
 - Writable: No
 - Contents: L oil press (PSI)
-

Dataref: simcoders/rep/engine/oil/press_psi_1

- Type: float
 - Writable: No
 - Contents: R oil press (PSI)
-



RESOURCES & HOW-TOs

[SimCoders.com blog](#) contains tons of resources that you will find very useful when using REP.

Moreover, this is a list of How-Tos available.

- [How to lean the mixture](#)
- [How to keep the spark plugs clean](#)
- [How to choose the right oil for your engine](#)
- [How to quickly startup the engine with REP](#)
- [How to manage an emergency](#)
- [How to calculate the required fuel for your flight](#)

SUPPORT & CONTACTS

Before requesting support, please check [our FAQs](#), where you'll find answers to common questions about installation issues and general usage.

If you experience any technical problems with our software, feel free to contact us at support@simcoders.com. To help us assist you efficiently, please provide a detailed description of the issue and include your X-Plane Log.txt file.



VERSION CHANGELOG

V4.8.11

No change for this aircraft

V4.8.10

No change for this aircraft

V4.8.9

No change for this aircraft

V4.8.8

No change for this aircraft

V4.8.7

V4.8.6

No change for this aircraft

V4.8.5

V4.8.4

1. Fix: the Settings menu was not managed properly in VR

V4.8.3

1. No changes for this airplane.

V4.8.2

1. Fix: the system time was not always read correctly, therefore some features (like the time-based maintenance actions may not always work propely on some systems)

V4.8.1

1. Fix: engine vibrations at startup were not visible anymore

V4.8.0

1. Support for time and ground speed multiplier



V4.7.14

1. No change for this airplane

V4.7.13

1. No change for this airplane

V4.7.12

V4.7.11

1. Improvement: the tie downs should better lock the plane to the ground

V4.7.10

Fix: after loading a saved flight, the alternator may not work properly

V4.7.9

1. Fix: in some engine configuration and bus loads, the alternator could not charge the battery completely

V4.7.8

1. Fix: In X-Plane 12 the plugin forces could bump the plane at engines stop
2. Fix: memory leak in datarefs handling

V4.7.7

V4.7.6

1. Fix: some sounds would not stop playing after plane crash
2. Fix: fuel totalizer fix in XP12

V4.7.5

No changes for this airplane

V4.7.4

No changes for this airplane

V4.7.3

1. Fix: Some components of the maintenance window were misplaced
2. Fix: Mass And Balance could not be applied correctly if the flight was started with the engines running



V4.7.2

1. Fix: crash after replay

V4.7.1

1. Fix: crash after pause

V4.7.0

1. Fix: lower minimum RPM
2. Improvement: better alternator voltage simulation at low RPM
3. Improvement: support for Apple M* processors
4. Improvement: better compatibility of the Mass and Balance system with X-Plane 12
5. Improvement: it is now possible to vertically move the in-flight tips windows (no VR support for this feature at the moment)
6. Fix: missing library link if XP12

V4.6.7

1. Fix: improved support for v1.9 version of the base plane

V4.6.6

1. Improved REP sound compatibility with internal X-Plane sound sliders

V4.6.5-h2

1. Fixed broken plugin reset

V4.6.5-h1

1. Fixed broken dataref

V4.6.5

1. Improved OpenAL errors log
2. Improved braking system compatibility with hardware toe pedals
3. Improved static elements compatibility with third-parties addons

V4.6.4

1. No changes for this plane

V4.6.3

1. No changes for this plane



V4.6.2

1. Improvement: MAP behavior at low RPM

V4.6.1

V4.6.0

1. Change: "Smooth Brakes" and "Automatic Differential Brakes" options merged into the "Advanced Braking" option
2. New: REP now includes TXT format checklists too
3. Improvement: Turbo maximum RPM lowered to give a more realistic boost at altitude
4. Improvement: better LOP cut-out behavior in piston engines
5. Improvement: more realistic piston engine power response when running ROP
6. Improvement: more realistic manifold pressure behavior at high RPM
7. Improvement: running oversquare when LOP does not damage the piston engines
8. Improvement: REP waits for the real weather to load (if enabled) before updating the engine temperatures at startup
9. Improvement: improved hypoxia recover at low altitude
10. Fix: the manifold pressure was too low at idle
11. Fix: The REP update loop was not always executed correctly in certain configurations
12. Fix: The avionics is less prone to damage if the alternator is turned on/off with the avionics master on

V4.5.12

1. Improved towing behavior
2. Added engine cooling down sounds (exhaust ticks)
3. No changes for this plane

V4.5.10-h1

1. Fix: on Linux the plugin could crash the sim on startup because of a bad library link

V4.5.10

1. A cancel window is shown before beginning the engine autostart procedure
2. Fix: the instrument wear could not save its state properly on some systems
3. Fix: it was not possible to set the transponder to ON/ALT when using the honeycomb hardware
4. Fix: the emergency landing gear extension did not work properly after the last JF basemodel update

V4.5.9-h2

1. Improved the gear drag curve



V4.5.9-h1

1. Reduced the pitch-up moment at high speed

V4.5.9

1. Improved the FSEconomy implementation reliability
2. Improved manifold pressure algorithm
3. Improved the pitch trim time
4. Improved the cruise pitch attitude

V4.5.8

1. Improved the hardware rudder pedals compatibility (it is now possible to disable the automatic differential braking)
2. Improved the drag model with gear down

V4.5.7

V4.5.6

1. New: REP Economy System now supports X-CPL-Pilot
2. Fix: in the maintenance window, some text could overflow from the borders
3. Fix: in some configurations, the installer may not properly modify the FMOD .snd files

V4.5.5

1. The static elements are not visible anymore during replay
2. REP reports in X-Plane's log when a damage/failure is taking place
3. The damage caused by running the engine in the redbox was not always calculated properly
4. Update the JustFlight base model to v1.8.1
5. Fix: the DME did not save its power switch position between flights
6. Fix: some performance charts were missing in the kneeboard

V4.5.4

1. Restored the the A/P hold hidden button with a fix to avoid the sound loop
2. The rudder check during walkaround takes rudder cables stiffness into account
3. Improved the drag curve at low speed
4. Improved the yaw moment at low speed
5. Improved the flaps extension/retraction speed
6. Fix: EGT indicator going out of scale
7. Fix: Overboost light randomly going off
8. Attempting to fix a crash while switching to VR

V4.5.3 hotfix 1

1. Added the side menu vertical offset option in REP's settings



V4.5.3

V4.5.2

V4.5.1

1. Fix: the oil pump failure message was missing

V4.5.0

1. New: improved VR support in walkaround and towing modes
2. The magnetos are forced to "both" when starting the flight with engines running
3. The tiedowns and chocks are removed when starting the flight with engines running
4. Fix: CTD when trying to connect to FSE
5. Fix: Typos in Maintenance Window
6. Fix: excessive oil consumption when a cylinder is partially worn out

V4.4.6

V4.4.5

1. The in-flight tips window now resize correctly in VR
2. Optimizations for XP11.50
3. Some sounds (very few) were played using the wrong equalizers resulting in too high or too low volume in relation to their position in the cockpit

V4.4.4

1. Fix: XP10 crash on reload
2. Fix: CTD on plugin disable

V4.4.3

1. New: dataref to control the wind volume: simcoders/rep/settings/wind_volume
2. Fix: memory leak

V4.4.2

1. New: the standalone fuel market support USA airport codes 3 chars long
2. Fix: large windows did not fit the screen properly

V4.4.1

V4.4.0

1. The simulator<->REP interface has been reworked to accommodate future improvements



V4.3.5

1. FSEconomy: fix for HTTPS protocolo update

V4.3.4

1. FSEconomy: fixed connection issue (HTTP 301 not followed properly)

V4.3.3

V4.3.2

1. Fix: the com radio status was not properly restored

V4.3.1

1. New option to show or hide the generic messages
2. Improved the Nav/Com radios status feedback in the maintenance window
3. Fix: the maintenance window could crash during the FSEconomy data update

V4.3.0

1. Fix: the EGT indicator could report negative values
2. Message to warn that the Experimental Flight Model is not supported
3. Engine Monitor shows CHT and Oil Temperature
4. Fix: The preheater did not work properly
5. Fix: the Economy System status could be loaded only partially in some situations
6. Fix: the in-flight tips were not visible in VR. Thanks to [sparker](#) for helping debugging the issue.
7. Fix: walkaround CTD
8. Fix: message boxes did not support VR
9. Improved the engine negative torque model

V4.2.3

1. Fix: solved some windows positioning issues
2. Fix: in XP10 REP did not recognize opening a window as a paused sim state
3. Improved startup behavior

V4.2.2

1. Fix: Tach time was not shown correctly in the Tachometer
2. Fix: improved CHT algorithm with X-Plane 11.35
3. Fix: the kneeboard and maintenance windows did not save their position properly, therefore they were not shown correctly after being popped out
4. Fix: and X-Plane 11.35 bug prevented REP from reading the proper airspeed



V4.2.1

1. No changes for this aircraft

V4.2.0

1. **New:** Simulation of Factory and Tuned exhaust effects
2. **New:** The status file are backed up before being overwritten
3. **New:** It is now possible to save the windows position between sessions
4. Improved manifold pressure behavior

V4.1.8

1. New: it is now possible to set the wind sound volume in REP's settings window

V4.1.7

1. CTD fix

V4.1.6

1. Minor Networking fix

V4.1.5

1. Increased the debug log for the Economic System

V4.1.4

1. No changes for this aircraft

V4.1.3

1. No changes for this aircraft

V4.1.2

1. No changes for this aircraft

V4.1.1

1. Fix: an alternator did not save its status properly
2. Minor fixes



V4.1.0

1. **New:** FSEconomy integration with the maintenance system
2. Fix: X-Plane crashed in case of airplane crash
3. Fix: the systems' damages were updated during replay as well
4. Fix: on XP10 some message windows were not shown properly
5. Fix: on multimonitor setups the in-flight tips were shown on the wrong monitor

V4.0.3

1. Fix: the aircraft serial number is now more randomized
2. Fix: the weight and balance traded "OLt" of fuel when changing the passengers' masses
3. Fix: the initial status of the aircraft could not be reset properly
4. The spark plugs fouling in-flight tip is now easier to understand
5. Improved instruments behavior once weathered
6. The Tachometer Time is now only based on RPMs

V4.0.2

1. **New:** it is now possible to deactivate the brakes smoothing
2. Fix: fixed a crash when closing a plugin's window
3. Better gyros behavior

V4.0.1

1. Fix: some mouse clicks were not captured properly in the Maintenance Report window
2. Fix: it was not possible to properly change the oil filter using the Maintenance Report window

V4.0.0

1. **New:** Economic System
2. Improved multimonitor support

V3.5.11

1. Vacuum Pump: the pump failure can be triggered using X-Plane failures menu
2. Attitude Indicator: the indicator failure can be triggered using X-Plane failures menu
3. Fix: changing livery or airport could not allow the aircraft to load its status properly

V3.5.10

1. Minor fixes

V3.5.9

1. The Hypoxia warning is shown only when the TUC is lower than 20 minutes



V3.5.8

1. Minor fixes

V3.5.7

1. Fix: the state loading could load incomplete data on some systems
2. Minor fixes

V3.5.6

1. Better fuel flow at startup
2. It's now possible to paste the text in the licence box
3. Fix: saving a state file could have caused a crash on some specific system configurations
4. Fix: the static elements are better managed after leaving the replay mode
5. Fix: in some cases REP was unable to retrieve the correct system time

V3.5.5

1. Fix: In some cases the plugin was unable to recognize if the sim was paused or not. This could lead to some major issues, such airplane crash after leaving replay mode
2. Fix: the prop governor did not react correctly when controlled using a joystick axis
3. Fix: minor fixes to the sound engine
4. Fix: in some cases the engine temps were not updated correctly if the airplane was loaded in flight, causing the oil pump to seize
5. Fix: in some cases the liveries status were not loaded properly when changing from a livery to another of the same aircraft
6. It is now possible to disable the advanced steering algorithm
7. Minor fixes

V3.5.4

1. Minor Fixes

V3.5.3

1. Fix: fixed a compatibility issue with the sound engine
2. Fix: the parking brake lever was not properly set when parking brake was toggled using X-Plane default commands.

V3.5.2

1. Fix: the new OpenAL equalizer showed some incompatibility with 3rd party plugins. This update will try to work around them and prevent crashes. A better fix will be provided in future releases.
2. Fix: the parking brake lever was not properly set when parking brake was toggled using X-Plane default commands.



V3.5.1

1. Fix: the flaps handle did not move when the battery was off
2. Fix: the flaps motor sound was heard while checking the flaps during the walkaround
3. XP11.30 new hypoxia effect is now overridden and REP's more precise hypoxia effect is used instead

V3.5.0

1. **New:** It is now possible to load a worn out airplane. Checkout the [Persistent Aircraft and Components Wearing](#) chapter.
2. **New:** The cockpit instrumentation wears out with time and can be fixed using the Maintenance Report
3. **New:** [Hobbs Time](#) and [Tach Time](#) are now counted separately for the airframe and the engines
4. **New:** It is now possible to move the viewpoint while in walkaround or towing mode. VR not supported yet. See the [Towing](#) and [Walkaround](#) sections for more information.
5. The static elements, such chocks and tie-downs, are now managed during replay
6. The propeller governor dynamics at low RPMs are much improved
7. Improved starter algorithm
8. Fix: under certain conditions, the fuel pump sounds where not stopped with the pump itself
9. Fix: a bug prevented the cylinders to fail properly and to report their compressions in the Maintenance Report
10. Fix: the hypoxia message was shown when the hypoxia was disabled
11. Fix: the oil filter get less clogged when it's past TBO
12. Fix: the autostart broke if the weight and balance configuration was changed while it was running
13. Fix: The Maintenance Report and the Kneeboard were not dimmed correctly at night

V3.4.6

1. **New:** Automatic updates via [SkunkCrafts Updater](#) plugin
2. **New:** REP is now compatible with the [Differential and progressive brakes for X-Plane 11](#) plugin
3. Improved documentation
4. Improved gyros spin-down behavior
5. Fix: failures and damages were triggered while in replay mode
6. Fix: the oil pressure needle was not visible if the airplane was loaded with the engines running
7. Minor improvements

V3.4.5

1. **New:** It is possible to manage the static elements from the plugins menu
2. **New:** Command to toggle the static elements
3. **New:** Command to fix all systems
4. **New:** REP correctly recognizes the engine failures triggered by X-Plane
5. Fix: In the latest X-Plane versions the in-flight tip messages may have been not shown correctly



6. Fix: Some entries in the tech report were not clickable
7. Fix: Minor typos in kneeboard
8. The installer has been improved to work with all the airplane mods available over the Internet
9. More realistic hypoxia effect at lower altitudes
10. Improved documentation

V3.4.4

1. Minor fixes

V3.4.3

1. **New:** Improved engine torque algorithm
2. **New:** Improved sparkplugs fouling algorithm
3. **New:** Removed the mouse gestures to open the kneeboard
4. **New:** The checklists/mass and balance/towing mode/autostart are now accessible from the plugins menu as well as the lateral menu
5. **New:** a new command has been added to switch on the HI fuel pump
6. Improved multimonitor compatibility
7. Fix: oil pressure was sometimes too low
8. Minor fixes

V3.4.2

Internal test build – not released to the public

V3.4.1

1. Fix: missing input chars in textbox
2. Fix: input on multimonitor setup was not working as expected
3. Minor fixes

V3.4.0

1. **New:** Experimental VR Support
2. **New:** SDK 3.0 (Detachable) windows
3. Improved engine model
4. Minor fixes

V3.3.1:

1. Fix: Too rich mixture at full power
2. Minor fixes



V3.3.0

1. **New:** 100% custom engine model to replace the internal X-Plane piston engine
2. **New:** Engine monitor enables engine fine tuning during flight
3. **New:** Improved drag model
4. **New:** Improved walkaround oil system check
5. **New:** Improved ground roll sounds
6. **New:** Improved ADI spoolup model
7. **New:** Walkaround keyboard commands
8. Minor fixes

V3.2.1

1. Fix: Loading and unloading the plugin more times caused a crash
2. Fix: If the flight was started with engine running, the mixture was set to idle-cutoff
3. Minor fixes

V3.2.0

1. **New:** 3D sounds
2. **New:** Advanced gyro wander
3. **New:** You can now check the pitot probe temperature during walkaround
4. **New:** Postflight walkaround
5. **New:** Lights check during walkaround
6. **New:** More information about the cylinders status
7. **New:** The hobbs hour are now saved in the airplane state file and restored the next session
8. Improved steering algorithm
9. Better startup sounds
10. Fixed a bug that caused the cylinders to not being fixed correctly after an engine seizure
11. The landing gear failures are based on actual gravity acceleration. Now the landing on sloped strips are more realistic.
12. Fix a bug that may caused the engine to not fail when it should have
13. Minor fixes and improvements

V3.1.1

1. **New:** The chocks and tie downs are checked before automatic start
2. **New:** The lateral menu can now be completely hidden (see the plugin settings window)
3. Improved flooded engine message
4. Better compatibility with the "Start with engine running" setting
5. Fix: the label colors in some walkaround views were incorrect
6. Fix (XP11 only): the wind sound volume is controlled by the environment sounds volume
7. Minor fixes

V3.1.0

1. **New:** Dynamic ground roll sounds
2. Minor fixes



V3.0.0

1. **New:** reworked user interface and graphics
2. **New:** automatic startup procedure
3. Improved flight dynamics in X-Plane 11
4. Fix: some throttle quadrants did not work correctly with REP
5. Minor fixes and improvements

V2.6.4

1. **New:** Flight dynamics improvements in both X-Plane 10 and 11
2. Fix: Minor fixes

V2.6.3

1. Fix: The right toebrake did not couple properly with external rudder pedals
2. Fix: The oil system "Refill" button was not clickable

V2.6.2

1. Fix: Minor fixes

V2.6.1

1. Fix: Checklists typos
2. Fix: Improved fuel pump sounds
3. Fix: The wheel brakes may be stuck after towing
4. Fix: Improved engines doppler and distance sounds
5. Fix: Damages disabled during replay
6. Fix: Improved the joystick compatibility with the new propeller governor

V2.6.0

1. **New:** Custom propeller governor

V2.5.1

1. Fix: Corrected the toe brakes algorithm

V2.5.0

1. **New:** Improved torque effect
2. **New:** Improved CHT and Oil Temperature algorithm
3. **New:** Oil temperature tips
4. **New:** Improved hypoxia effect & algorithm
5. **New:** Fuel & Oil check in walkaround mode
6. Minor Fixes



V2.4.0

1. **New:** Spark plugs dynamics:
 - The spark plugs get fouled when the engine runs at low RPMs
 - The default spark plugs can be replaced with the fine-wire ones
2. **New:** Hypoxia can now be disabled in the settings panel
3. **New:** The engine may be damaged by wrong ROP/LOP operations
4. Minor Fixes

V2.3.0

1. **New:** Hypoxia simulation
2. **New:** Oil filter simulation: need to replace it at every oil change
3. **New:** Oil pump damage simulation
4. **New:** Fuel filter simulation: need to replace it after TBO
5. **New:** Vacuum pump casual failure simulation
6. **New:** More realistic engine priming dynamics
7. **New:** Improved W&B simulation during flight
8. Fix: Minor bug fixes

V2.2.1

1. Fix: the installer did not apply some changes correctly

V2.2.0

1. **New:** Simplified installation
2. Fix: The analog and digital fuel flow gauges were not reporting the correct fuel flow under certain circumstances
3. Fix: Minor fixes

V2.1.0

1. **New:** Engine pre-heating and winterization kit
2. **New:** The avionics settings are restored after reloading the airplane
3. **New:** Better compatibility with other plugins that manage the state of the airplane (such as X-Bookmark)
4. **New:** The sounds volume is controlled by the Carenado volume knob
5. **New:** The lateral menu is dimmed at night
6. Fix: More realistic ground physics
7. Fix: The oil system is now reporting the correct oil quantity
8. Fix: Minor fixes

V2.0.3

1. Fix: The cowl flaps lever cannot be moved using the mouse wheel
2. Fix: The kneeboard images were cutted and not shown correctly



V2.0.2

1. **New:** Improved cylinders physics
 - The CHT temperature is now provided by a custom algorithm
2. **New:** Improved oil system
 - The oil temperature is now provided by a custom algorithm
 - The oil temperature and pressure depends also on oil quantity and quality
3. **New:** Improved touchdown sounds
4. Minor Fixes

V2.0.1

1. Fix: It was not possible to enter the walkaround mode if the "Cold and Dark" option was disabled
2. Fix: Typos in the towing tips
3. Fix: The Walkaround checklists were not correctly visible on smaller screens.

V2.0.0

1. **New:** Custom interactive walkaround and pre-flight procedures.
2. **New:** Custom airplane towing system
3. **New:** More advanced engine physics (especially for engine startup)
4. **New:** More complex damages system for the avionics, the engine and the landing gear such as:
 - Oversquare operation of the engine is not always allowed
 - The tires are damaged if the brakes are active on touchdown
5. **New:** More in-flight tips
6. **New:** Custom menu that provides an easy access to REP's features
7. **New:** Stall buffeting effect (improved if HeadShake 1.5+ is installed)
8. Minor changes to the sounds system
9. Minor changes to the graphics system
10. Bug fixes

V1.0.2

1. **New:** Correct steering and ground roll physics, especially in cross wind conditions.
2. **New:** The Weight & Balance tool now predicts the C.G. position at landing.
3. **New:** HeadShake and REP integration to better simulate the engine vibrations of the TSIO-520 (Headshake v1.5 or higher required).
4. Fix: Improved compatibility with Saitek products.
5. Fix: Minor fixes.

V1.0.1

1. **New:** A tip is shown if the pilot is managing the plane's system in the wrong manner.
2. **New:** Some failures (such as the avionic's) are behaving in a more realistic way.
3. **New:** The parasite roll moment incorrectly reproduced by X-Plane is reduced.
4. **New:** The flooded engine behavior is now more realistic. If flooded, the engine may actually start with closed mixture.



5. **New:** Engine manufacturer and model in the Hangar window.
6. **New:** Better oil color report in the Hangar window.
7. **New:** Added the "About" menu.
8. **Fix:** Sometimes, the joystick mixture axis was not correctly recognized.
9. **Fix:** Cranking a running engine does not reduce the engine's RPM anymore.
10. **Fix:** Cranking a running engine does not cause an avionics failure anymore.
11. **Fix:** The pilot altimeter's barometer was rendered incorrectly.
12. **Fix:** The propeller joystick axis was not working as expected.
13. **Fix:** The oil pressure was too high during flight.
14. **Fix:** Minor changes to improve performance and correct typos.

V1.0.0

1. Initial Release



LICENCE

End-User License Agreement for SimCoders.com Reality Expansion Pack

This End-User License Agreement (EULA) is a legal agreement between you (either an individual or a single entity) and the mentioned author (SimCoders.com) of this Software for the software product identified above, which includes computer software and may include associated media, printed materials, and "online" or electronic documentation ("SOFTWARE PRODUCT").

By installing, copying, or otherwise using the SOFTWARE PRODUCT, you agree to be bounded by the terms of this EULA. If you do not agree to the terms of this EULA, do not install or use the SOFTWARE PRODUCT.

SOFTWARE PRODUCT LICENSE

The Reality Expansion Pack is being distributed as payware licenced software for personal, commercial use, non-profit organization, educational purpose. It may not be included with CD-ROM/DVD-ROM distributions. You are NOT allowed to make a charge for distributing this Software (either for profit or merely to recover your media and distribution costs) whether as a stand-alone product, or as part of a compilation or anthology, nor to use it for supporting your business or customers without the written permission of the author. It may not be distributed freely on any website or through any other distribution mechanism.

1. GRANT OF LICENSE.

This EULA grants you the following rights: Installation and Use. You may install and use an unlimited number of copies of the SOFTWARE PRODUCT.

Reproduction and Distribution. You may not reproduce and distribute an unlimited number of copies of the SOFTWARE PRODUCT.

2. DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

Limitations on Reverse Engineering, Decompilation, Disassembly and change (add,delete or modify) the resources in the compiled the assembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE PRODUCT, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Update and Maintenance

The Reality Expansion Pack minor upgrates are FREE of charge.

Separation of Components.

The SOFTWARE PRODUCT is licensed as a single product. Its component parts may not be separated for use on more than one computer.



Software Transfer.

You may permanently transfer all of your rights under this EULA, provided the recipient agrees to the terms of this EULA.

Termination.

Without prejudice to any other rights, the Author of this Software may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE PRODUCT and all of its component parts.

3. COPYRIGHT.

All title and copyrights in and to the SOFTWARE PRODUCT (including but not limited to any images, photographs, clipart, libraries, and examples incorporated into the SOFTWARE PRODUCT), the accompanying printed materials, and any copies of the SOFTWARE PRODUCT are owned by the Author of this Software. The SOFTWARE PRODUCT is protected by copyright laws and international treaty provisions. Therefore, you must treat the SOFTWARE PRODUCT like any other copyrighted material. The licensed users or licensed company can use all functions, example, templates, clipart, libraries and symbols in the SOFTWARE PRODUCT to create new diagrams and distribute the diagrams.

LIMITED WARRANTY

NO WARRANTIES.

The Author of this Software expressly disclaims any warranty for the SOFTWARE PRODUCT. The SOFTWARE PRODUCT and any related documentation is provided "as is" without warranty of any kind, either express or implied, including, without limitation, the implied warranties or merchantability, fitness for a particular purpose, or noninfringement. The entire risk arising out of use or performance of the SOFTWARE PRODUCT remains with you.

NO LIABILITY FOR DAMAGES.

In no event shall the author of this Software be liable for any special, consequential, incidental or indirect damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or any other pecuniary or physical loss) arising out of the use of or inability to use this product, even if the Author of this Software is aware of the possibility of such damages and known defects.



LibCURL EULA

The following statements are applicable **only** to the [LibCURL library](#) used to provide some features of this product.

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2018, Daniel Stenberg, daniel@haxx.se, and many contributors, see the THANKS file.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.